



The Ultima[®] XI Gas Monitor

[Infrared technology for combustible gas detection]

The ULTIMA XI Gas Monitor

is a digital signal processor-based, infrared point gas detector for continuous monitoring of combustible gases and vapors. Designed around a rugged 316 stainless steel enclosure, the ULTIMA XI Monitor is a completely self-contained, explosion-proof unit that is dependable in harsh environments.

The ULTIMA XI Monitor operation is based on dual wavelength-heated optics technology, providing definitive compensation for temperature, humidity and aging effects. The IR technology offers excellent long-term stability, eliminates the need for frequent calibrations and reduces overall cost of ownership.

Features and Benefits

- No-gas calibration. A zero adjustment provides reliable accuracy.
- 316 SS enclosure.
- Selectable algorithms for a variety of hydrocarbon-based gases.
- 4-20mA output.
- “Fail to Safety” operation.
- Designed without a sintered disk for optimum performance in the harsh offshore environment.
- Operates over extended temperature ranges.
- Extreme speed of response.
- Immune to poisoning.
- Operates in high-gas and low-oxygen environments.


Calibration

The patent-pending calibration method of the ULTIMA XI Monitor provides the simplest, one-man calibration requirements on the market.



Simply place the calibration cap onto the ULTIMA XI Monitor and calibration is initiated. The intrinsically-safe calibration cap provides status on zero and span calibration, along with final calibration results.



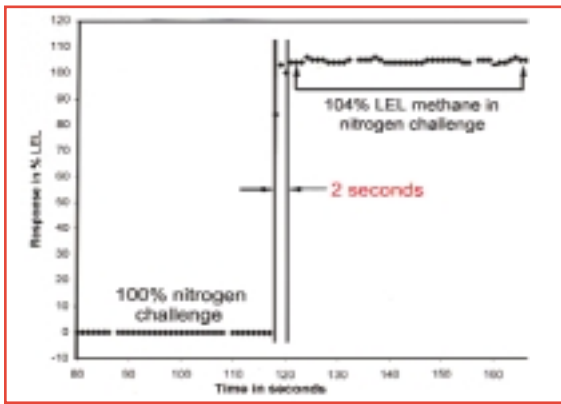


Extremely Fast Speed of Response (T90 < 2 sec.)



Ultima XI Accessories

Specifications:

| | |
|-----------------------------|--|
| Gas Types and Ranges | C1-C7 hydrocarbons; 0-100% LEL |
| Temperature Range | -40°C to +60°C (-40°F to +140°F) |
| Stability | ±5% Full Scale/year |
| Accuracy | |
| Repeatability | ±2% Full Scale for 100% LEL |
| Linearity | <2% Full Scale |
| Response Times | |
| T90 | <2 sec. |
| Humidity | 0%-95% RH, non-condensing |
| Sensor Warranty | 2 years |
| Power Input | 10-30VDC |
| Current Draw | 200mA maximum @ 24VDC |
| Wiring Requirements | 3-wire |
| Signal Output | 4-20mA 3-wire current source |
| Conduit Entries | One entry, 3/4" NPT (19.05mm) |
| Physical | |
| Weight | 316 stainless steel |
| Dimensions | 6 lbs. (2.7kg) |
| Dimensions | 2.5" dia. x 8" long (64 x 203mm) |
| Approval Ratings | |
| | CUL 1203/C22.2-30 Class I, Div. 1, Groups B, C, & D; Class II, Div. 1, Groups E, F, & G; Class III |
| | CSA C22.2 No. 152 Combustible Gas Performance (pending) |
| | CE EMC Directive: 89/336/EEC (pending) |
| | CE ATEX Directive: 94/9/EC II 2G EEx d IIc T5 (Tamb -40°C to +60°C) (DMT pending) |

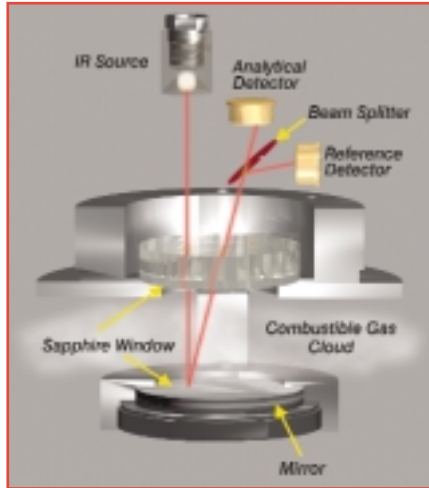

Principles of IR Technology

The Ultima XI Gas Monitor uses an electronically modulated source of infrared energy and two detectors that convert the infrared energy into electrical signals. Each detector is sensitive to a different range of wavelengths in the infrared portion of the spectrum.

The source emission is directed through a window in the main enclosure into an open volume. A mirror at the end of this volume, protected by a second window, directs the energy back through the window in the main enclosure and onto the detectors.

The presence of a combustible gas in the open volume will reduce the intensity of the source emission reaching the analytical detector but not the intensity of the source emission reaching the reference detector. The microprocessor monitors the ratio of these two signals and correlates this to a %LEL combustible reading.

Ordering Information

All Ultima X Series Gas Monitors are manufactured using MSA's Assemble-To-Order (ATO) process. For further information on the Ultima X Series Gas Monitors, see datasheets 07-2051 and 07-2054.

Offices and representatives worldwide

Note: This Data Sheet contains only a general description of the product shown. While uses and performance capabilities are described, under no circumstances should the product be used except by qualified, trained personnel, and not until the instructions, labels or other literature accompanying the product have been carefully read and understood and the precautions therein set forth followed. Only they contain the complete and detailed information concerning this product.

Instrument Division:
P.O. Box 427, Pittsburgh
PA 15230 U.S.A.
www.MSAsgasdetection.com

In U.S.:
Phone: 1-800-MSA-INST
Fax: 1-724-776-3280

In Canada:
Phone: 1-800-MSA-INST
Fax: 1-905-238-4151

In Mexico:
Phone: 52-55 2122-5770
Fax: 52 (5) 3 59 43 30

MSA International:
Phone: 412-967-3228
Fax: 412-967-3373

